

ShoeSecure Preparation

-Fitting to an Existing Shoe-



1: Check the fit of the ShoeSecure by holding it in place



2: Holding the ShoeSecure in position, place the hoof on the ground



3: The bulbs of the heels should sit snugly against the inside of the ShoeSecure

ShoeSecure: Drill Hole Positioning

'Toothpaste trick'



1: Squeeze toothpaste into stud holes



2: Carefully place the ShoeSecure into position on the shoe




3: Press down firmly over the toothpaste and stud holes



4: Remove the ShoeSecure. Toothpaste now marks the areas to drill



5: 'Punch' a mark on the ShoeSecure through the toothpaste

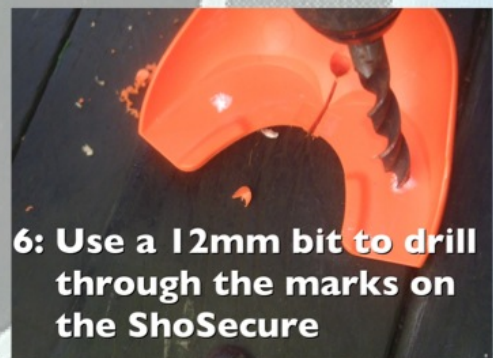

6: Use a 12mm bit to drill through the marks on the ShoSecure

Ensure 'SupaStuds' threads are kept clean
Ensure stud holes are clean
Do not cross-thread 'SupaStuds'

